

TOPigeonFront New Club Manager

For Clubs

User Manual

Version 1.0.0
By Thomas Chang
10 February 2022
Version 1.0.1
Updated by Fernando
16 June 2023



INDEX

1.	Introduction	Page 3
2.	Autoupgrade	Page 3
3.	Login with Club Admin account	Page 4
4.	Setup in your first time connection	Page 4
5.	Customized Parameters of Color, Liberation Site and Feeders	Page 5
	Color	
	Liberation Site	
	Feeds	
6.	Loft Setup	Page 7
	Add/Edit	
	Import lofts from previous version of Topigeon Club Manager	
	V8 Init	
7.	Pigeon List	Page 8
	Add/Edit	
	Multiple Edit	
	Multiple Delete	
	Export	
	Import	
	Loft Button	
	Download Pigeon Clock to PC button	
	Upload Pigeon PC to Clock button	
8.	Race	Page 11
	Add/Edit	
	Download Race Clock to PC button	
	Upload Race PC to Clock button	
	Marked download button	
	Result button	




1 Introduction

This manual is for Club races use, for admin of lofts, pigeons and races.

TOPIGEON CLUB MANAGER FRONT <== CLICK and DOWNLOAD INSTALLER

2 Auto upgrade


Before start using our new club manager, it is important to upgrade software to the last version, you can upgrade automatically to the newest version. When it is finishing download it will open the program automatically.

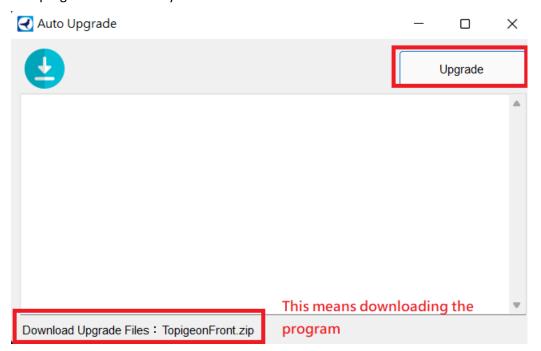




3 Login with Club Admin account

Enter your user ID and password of the admin account of your club to login the program, if you don't have one please contact your local distributor.

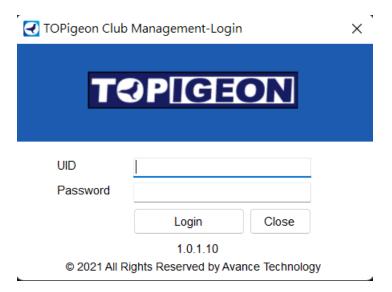

4 Setup in your first time connection

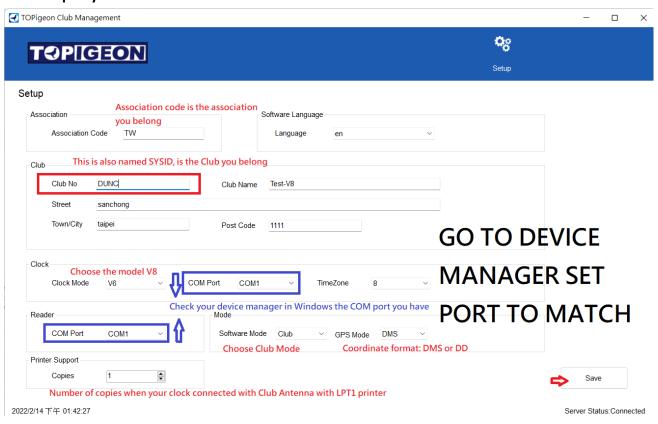


Complete the data and click save.




5 Customized Parameters of Color, Liberation Site and Feeders

When you save the setup, the parameters options will appear in the right side, you can input the customized parameters of your club:

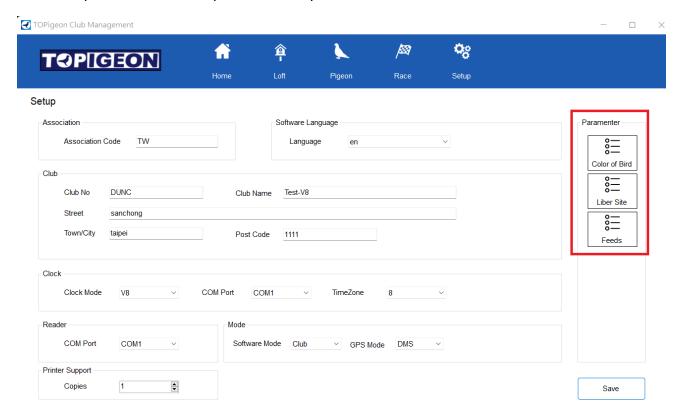


Color: You can add colors that your club it is using by add one by one or use the example to import, the example it is located in the folder TopigeonFront\Examples

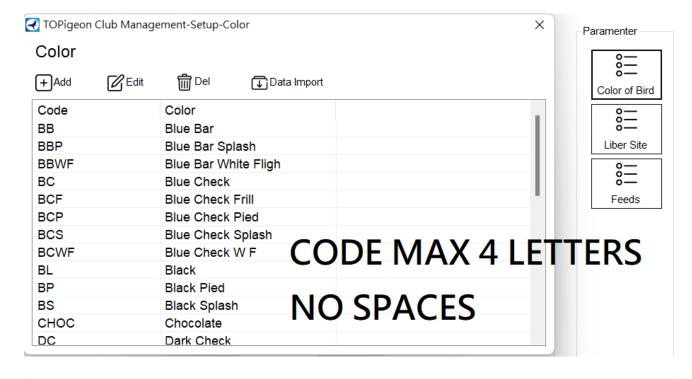




Liberation Site: You can add fixed liberation point, after when you create races you can select the liberation point directly.

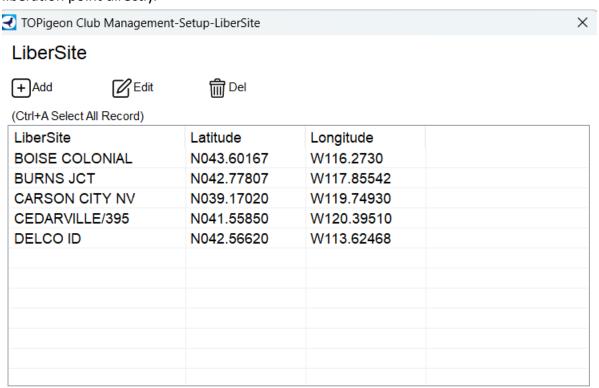

NOTE: The coordinate has the format N043°60′23.000 (DMS) or N043.60230 (DD) and 122°11′23.123″(DMS) or E121.123123 (DD). E= EAST, W=WEST, N=NORTH, S=SOUTH.


Feeds: If there are many feeders in one loft, you can set up the Feeders, this function it will be available in Topigeon.com soon.

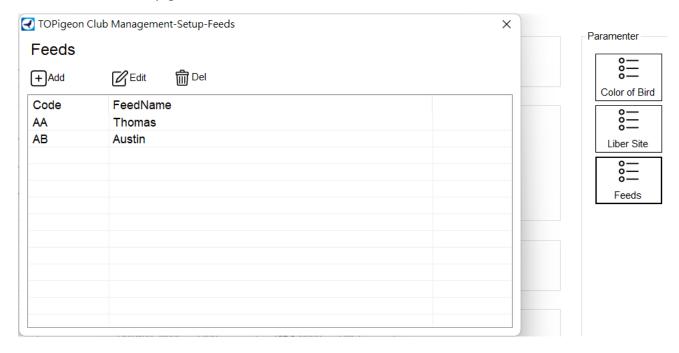



6 Loft Setup

This menu allow you to Add/Edit the lofts of your club, also you can initialize V8.

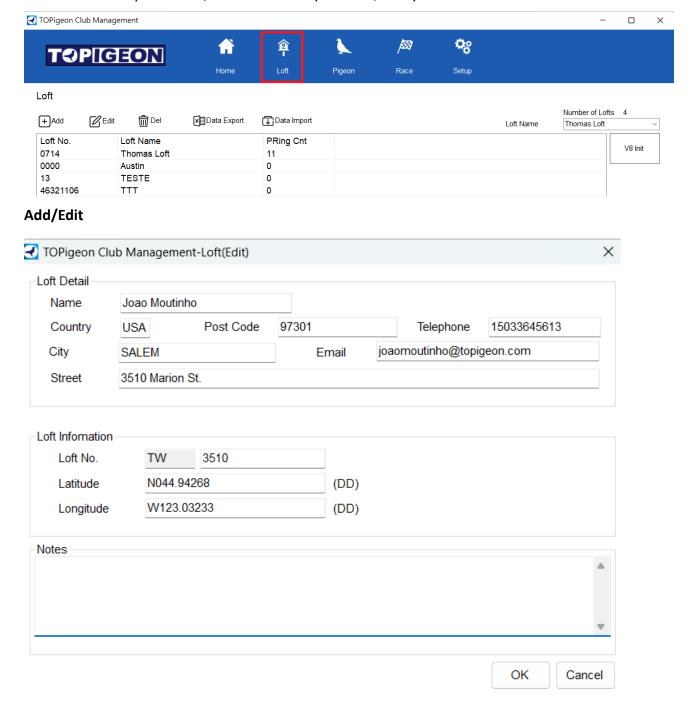


All is required to fill if you need to use the speed calculation function in Topigeon.com. The format of the coordinates should be same as Liberation Site. NOTE: The coordinate has the format N043°60′23.000 (DMS) or N043.60230 (DD) and 122°11′23.123″(DMS) or E121.123123 (DD). E= EAST, W=WEST, N=NORTH, S=SOUTH.



Import lofts from previous version of Topigeon Club Manager

You can import the lofts from Topigeon Club Manager exporting the list of lofts in cote.txt as the next:

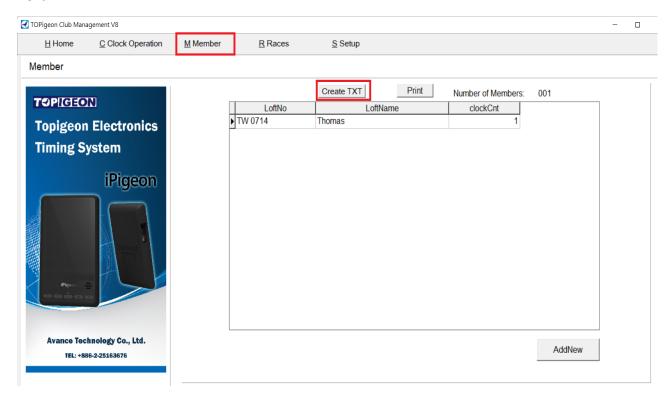


V8 Init

The button V8 Init, it will clean all the data of the clock and it will initialize the clock with the data of the loft you want to load it in. Choose the loft and then click V8 init, the clock will be saved with the loft you selected. The configuration of communication, pigeon data and races will reset, it is important to re-configure the APN and SMS phone number. **WARNING TO USE THIS BUTTON, IT WILL DELETE EVERYTHING.** To use this CLOCK need to be connect to PC status.


7 Pigeon List

This menu allows you to manage all the birds in your club:

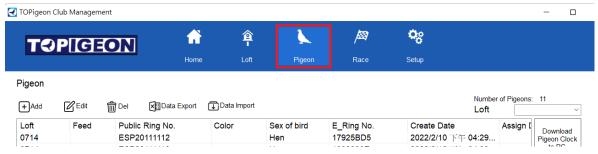


Add/Edit



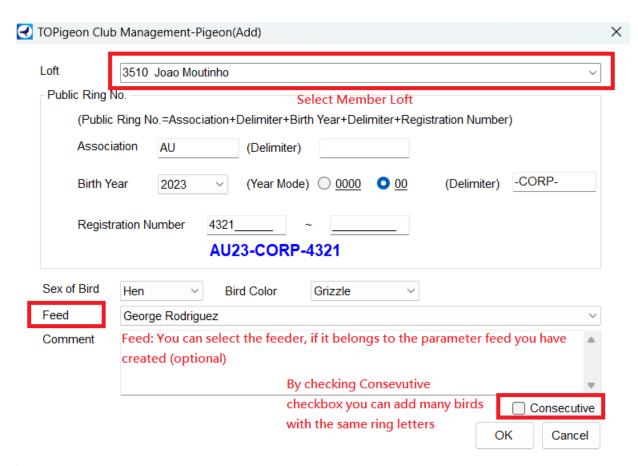

Multiple Edit: Pressing Ctrl or Shift, it is possible to select multiple pigeons and edit their sex, color or assign it to a feeder.

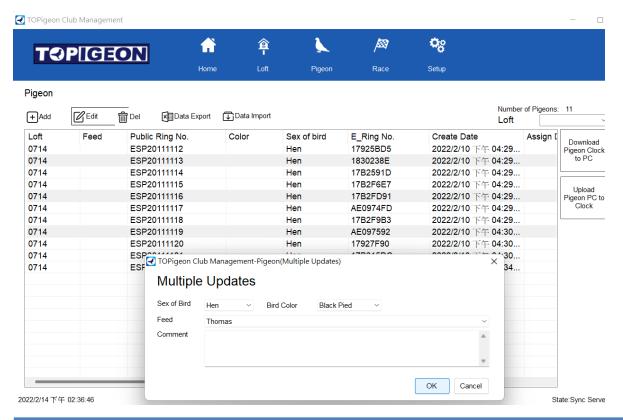




Multiple delete: Pressing Ctrl or Shift, you can select multiples pigeons and delete.

Export: Export the pigeon list in an excel file (now we do not support import pigeons from the output excel from this program.)

Import: You can import pigeons using the excel in the examples folder


TopigeonFront\Examples\Pigeon List Example.xlsx. Or if you are user of previous version of Club Management, please export the pigeon list of it. NOTE: It is important to use the example list, if the birds of the list is having Electronic Ring assigned, the format of the excel cell of the e-ring must be exactly same as the example. If there are any difference in excel cell format, it might be possible that the clock is not taking the ring during the basketing. Don't copy and paste in the e-rings.

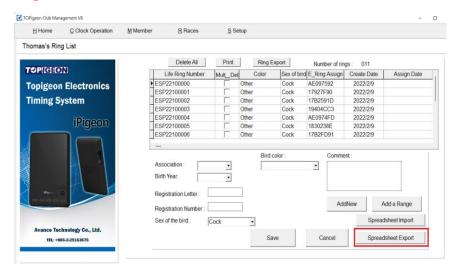

Loft Button: Filter the list with selected Loft

Download Pigeon Clock to PC button: Transfer the pigeons from clock to the program. **CLOCK MUST BE CONNECT TO PC.**


Upload Pigeon PC to Clock: Transfer the pigeons from the program to the clock. **CLOCK MUST BE CONNECT TO PC.**

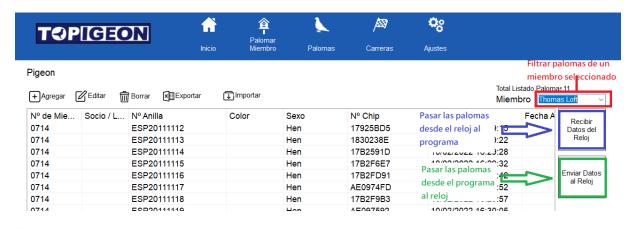




8 Race

To manage the races transfering from the clock, download the baskets made with the clock to the program and when finished, download the information of the arrivals to the program.

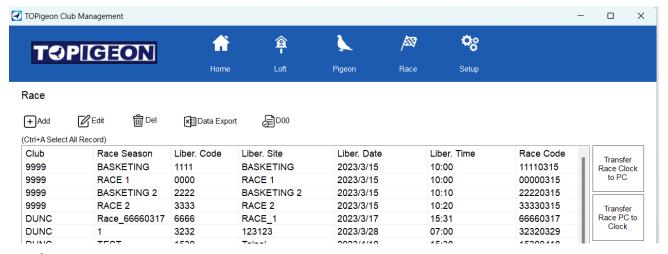

Add/Edit

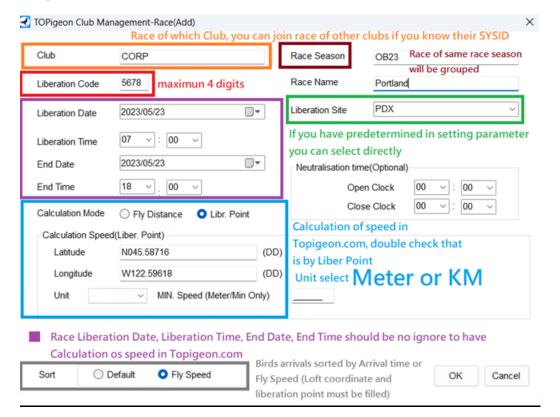

Required to fill:

Club: Each club has its own club number, the default code is your own club code. It is possible to join the races of another club but you need to know their club code and their race number. **Liberation Code:** maximum 4 digits (we suggest always 4 digits), each race has its own liberation

code, 4 digits of liberation code + 4 digits of liberation date composed the race number.



Liberation date: Date of liberation.

Liberation time: Time of liberation of the birds.

Cutoff Date and Cutoff Time: End date and time of the race. (Don't ignore it, need to be FILLED IN)

Optional

Race Name: Race Name

Neutralisation time: For multiple days races, the speed calculation will only count the effective

time.

Speed calculation mode:

a. Fly Distance: Mainly for One Loft Race, fixed distance calculation.

b. Liberation Point: If you have set the parameter of liberation site, the liberation point will be automatically input in the field. If not, please input your liberation coordinates to use the speed calculation.

Sort by:

a. Default: sorting by arrival time in Topigeon.com score.

b. Speed: sorting by speed in Topigeon.com score.


The next buttons the CLOCK MUST BE IN CONNECT TO PC

Download Race Clock to PC button: download the races of the clock to the program.

Upload Race PC to Clock button: upload the selected race to the clock from the program.


Marked Download button: Once finish the basketing, you can use this button to download the basketing data from the clock.




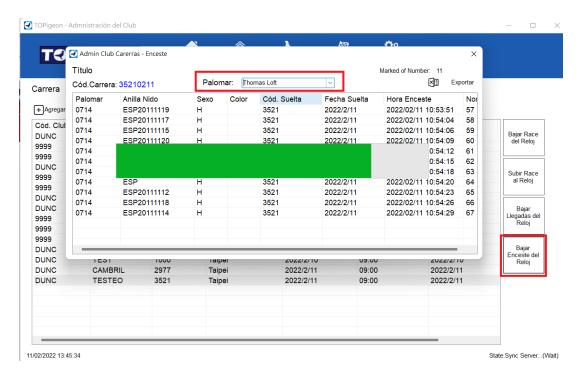

Result button: once the race has finished, you can use this button to download the results to the program.

NOTE: the race must be closed and printed, like below:

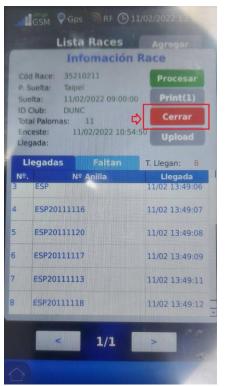

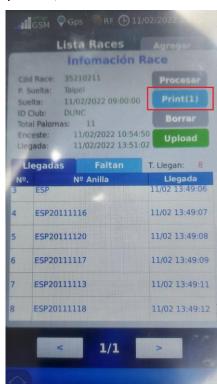

WARNING! DON'T PRESS DELETE, OTHERWISE THE RACE WILL BE DELETED AND THE RESULTS CANNOT BE RECOVERED.



